


正面

<p style="text-align: center;">RIVERSONG USER GUIDE</p>  <p>Rhythm S (EA56) Wireless Headphones Before using this product, read user manual instructions carefully.</p>	<p>FUNCTION KEY DESCRIPTION</p> <ol style="list-style-type: none"> 1. Volume + / Next Song 2. Power / Call / Multifunction 3. Volume - / Previous Song 4. 3.5mm AUX Port 5. Micro USB Port  <p>WELCOME</p> <p>Thank you for choosing us. Our wireless headphones have a fashionable design, powerful functions, high compatibility, and a true hands-free convenience when making calls and listening to music!</p>	<p>WIRELESS TECHNOLOGY</p> <p>With the wireless technology, you can connect the headphones to compatible devices without cables. The wireless connection allows you to use your mobile phone without holding it (listening to music, having phone calls, etc.), but the maximum distance between them shall be within 10 meters (about 30 feet). The wireless connection may be interfered by obstacles (such as walls) or other electronic devices.</p> <p>Some geographical areas might not provide the optimal wireless connection. Please consult your local authority or service provider for details.</p> <p>MAIN OPERATION GUIDE</p> <p>In below instruction, MF refers to the multifunction button (please refer to FUNCTION KEY DESCRIPTION)</p> <ul style="list-style-type: none"> •Pairing: Long press on the MF button for 3 seconds •Power off: Long press on the MF button for 5 seconds •Pause/Play: Short press once on the MF button •Volume up/down: Short press once on the +/- button •Last/Next song switch: Long press on the +/- button for 2 seconds •Answer phone call: Short press once on the MF button •End phone call: Short press once on the MF button •Reject phone call: Long press on the MF button for 2 seconds •Redial the last phone number: Double click on the MF button •Siri function: Long press on the MF button for 2 seconds •AUX function: Plug the 3.5mm audio cable into the AUX port 	<p>CHARGING THE HEADPHONES</p> <ol style="list-style-type: none"> 1. Use the Micro USB port to plug your cable and charge your headphones. It should take 3 hours to get fully charged. 2. It performs best after being fully charged. Please use DC-5V power to charge it. <p>IMPORTANT: Please note that the maximum voltage supported can not exceed DC-9V.</p> <p>LED LIGHT GUIDE</p> <p>Low power: the red light flashes every 10 seconds with a vocal message reminder saying "battery low". Under charging: the red light is on. Fully charged: the light turns blue.</p> <p>CONNECT WITH YOUR PHONE</p> <ol style="list-style-type: none"> 1. Place the headphones within 1 meter from your phone. The pairing success rate is higher when the 2 devices are at close-range distance. 2. Long press on the MF button until the red and blue lights flash alternatively, this means they are in pairing status. 3. Turn on the wireless function on your phone, search for the headphones model called "RS Rhythm S", click on it to connect. No password is required. When successfully connected, the LED indicator will flash in blue color. <p>Congratulations, it is successfully connected, now you can listen music and dial.</p> <p>3.5MM AUX PORT</p> <p>Use the AUX cable provided in the box to connect with your laptop/mobile in case your headphones are running out of battery.</p>	<p>CONNECT WITH TWO PHONES</p> <ol style="list-style-type: none"> 1. Long press on the MF button until the red and blue lights flash alternatively, this means they are in pairing status. 2. Turn on the wireless function on the mobile phone #1, search for the headphones model called "RS Rhythm S", click on it to connect. No password is required. 3. Turn off the wireless function of the mobile phone #1, long press on the MF button to turn off the headphones. 4. Long press on the headphones MF button until the red and blue lights flash alternatively again, this means they are in pairing status. 5. Turn on the wireless function on the mobile phone #2, search for the headphones model called "RS Rhythm S", click on it to connect. No password is required. 6. Turn on the wireless function of the mobile phone #1 to connect the headphones again. <p>NOTE</p> <p>Please keep the headphones and mobile phone #1/#2 within 10 meters.</p> <p>RECONNECTION</p> <ol style="list-style-type: none"> 1. The headphones will reconnect with your mobile phone automatically. 2. If it doesn't, please short press once on the MF button, or try again the pairing with the wireless connection function. <p>RESET</p> <p>When the headphones is under charging status, press on the MF button for 3 seconds until the red and blue lights flash alternatively 3 times.</p>
--	--	---	---	--

反面

<p>FAQ</p> <p>Why can't I find the headphones model on my phone?</p> <p>It might be because the headphones are power off; or the wireless connection function of your mobile phone encounters some issues.</p> <ol style="list-style-type: none"> 1. After you power off your headphones, long press on the MF button until the red and blue lights flash alternatively to activate the headphones' pairing status. 2. Reset the headphones (see above instructions). 3. Reboot your phone, and connect again. <p>NOTE</p> <p>When the headphones are under pairing status, the wireless connection pairing with your mobile phone should be done within 2 minutes, otherwise your headphones will automatically power off.</p> <p>Why the headphones cannot be linked with my mobile phone using the wireless connection function?</p> <p>It might be because the wireless connection function on your device is not turned on; your headphones are connected to another device; or the headphones are still in pairing mode.</p> <ol style="list-style-type: none"> 1. Please check if the wireless connection function on your device is turned on. 2. Please check and confirm your headphones are not connected to another device. 3. Please check if your headphones are in pairing mode (which will be indicated by light in blue & green flashing alternatively). 	<p>Why can't I hear any sound from my headphones?</p> <p>It might be because the headphones' volume is down to minimum; the headphones are not well connected with your phone; or your headphones are not within the wireless connection working range.</p> <ol style="list-style-type: none"> 1. Adjust volume on your phone; or press on the "+" button to turn the volume up. 2. Proceed to connection process again. 3. Keep your headphones within 10 meters from your mobile phone to respect the wireless connection working range. <p>NOTE</p> <p>When your headphones and mobile phone are in pairing connection process, please do not do any other operations with those devices.</p> <p>When charging, why does the red light not lighting up?</p> <p>It might be because you did not use your headphones for a long time.</p> <p>Charge your headphones for 30 minutes until the red light is on.</p> <p>NOTE</p> <p>Overcharging or placing the headphones under high temperature atmosphere will cut down the battery capacity and lifetime.</p>	<p>Why the headphones call quality is not good?</p> <p>It might be because the mobile network is not good enough; or the headphones are not in the wireless connection working range.</p> <ol style="list-style-type: none"> 1. Confirm whether the mobile network is strong enough. 2. Please confirm that the headphones are within the effective working distance of 10 meters from your mobile phone, also check if no major obstacle is causing interference to connection. <p>When the music is playing, why the music cannot be controlled with the play/pause, previous/next song and volume up/down buttons?</p> <p>It might be because the mobile phone doesn't support the AVRCP (Audio/Video Remote Control Profile) protocol.</p> <p>This feature requires the mobile device to be paired with the headphones to support the AVRCP (Audio/Video Remote Control Profile) protocol.</p> <p>When I use AUX audio cable, why is there no sound?</p> <p>It might be because the AUX audio cable is damaged.</p> <p>Please check whether the AUX interface of the output device is normal (not damaged) and whether the AUX 3.5mm audio cable is not damaged.</p>	<p>SPECIFICATION</p> <p>Bluetooth Version: 5.0 Supported Profiles: A2DP, AVRCP, HFP, HSP Operating Distance: 10m Bluetooth Chip: BK3266 Frequency Range: 20Hz-20KHz Sensitivity: 110dB Rated Power: 15mW Impedance: 32Ω Charging Time: 2.5h Playback Time: 25h continuously Battery Capacity: 450mAh</p>	 <p style="text-align: center;">www.riversongtech.com</p> <p style="text-align: center;">RIVERSONG TECHNOLOGY CO., LTD.</p> <p style="text-align: center;">Address: No. 1108 Tower B, Tian'an High-Tech Plaza Phase 1, Futian District, Shenzhen, Guangdong Official website: www.riversongtech.com</p>
---	--	---	---	--

EA56 说明书

料号: 07-EA56-00201-11

印刷: 单黑 / PANTONE 165C

材质: 157g双铜

尺寸: 60*90mm