


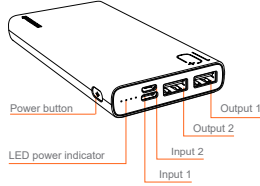
正面



USER GUIDE
—POWER BANK

Rise 10 (PB57)
Before using this product, please read these instructions carefully and keep them.

PRODUCT OVERVIEW



SPECIFICATION
Capacity: 10000 mAh
Rated Power: 37Wh
Input: 5V=2A
Output 1: 5V=1A
Output 2: 5V=2.4A
Total Output: 5V=2.4A (Max)
Port: Micro USB + Type-C + USB-A*2
Dimensions: ~129.8x63.8x16.1mm
Weight: ~210 g

WHAT'S IN THE BOX
Power Bank
USB Cable
User Manual
Warranty Card

CHARGING & DISCHARGING INSTRUCTIONS

Discharge Indicators

4 LED Lights ON	76%-100% Power Remaining
3 LED Lights ON	51%-75% Power Remaining
2 LED Lights ON	26%-50% Power Remaining
1 LED Light ON	10%-25% Power Remaining
1 LED Light Blinking	<10% Power Remaining




Charge Indicators

1 LED Light Blinking	1%-25% Power Remaining
1 LED Light ON and 1 Blinking	26%-50% Power Remaining
2 LED Lights ON and 1 Blinking	51%-75% Power Remaining
3 LED Lights ON and 1 Blinking	76%-99% Power Remaining
4 LED Lights ON	100% Power Remaining


Power status indications are as follows:

Power Indicator	○○○○	●○○○	●●○○	●●●○	●●●●
Power Left	Low Power	< 25%	26-50%	51-75%	76-100%

⚠ You can charge your power bank by the following ways

反面



www.riversongtech.com


RIVERSONG TECHNOLOGY CO., LTD.
Address: No. 1108 Tower B, Tian'an High-Tech Plaza Phase 1, Futian District, Shenzhen, Guangdong
Official website: www.riversongtech.com

HOW TO USE:

- Press the power button to turn on the power bank. The power indicator light will turn off automatically if the power bank is not in use for 5 to 10 seconds.
- Output and input ports can be found on the top of the power bank. The USB port is compatible for a variety of devices such as smartphones, tablets or other digital devices.
- When the device is plugged into the power bank, the power bank will immediately begin to charge the device.
- Use the provided Micro USB cable in order to connect the power bank to an adapter. The power bank will enter into sleep mode when not in use for about 1 minute.
- Once the device is fully charged, please unplug the charging cable and disconnect the charging device.

ATTENTION

- Read the user guide carefully in order to prevent hazards and accidents related to improper use.
- Do not throw, knock or drop the product, it will damage the outer case and inner PCBA.
- Please keep away the product from fire or water and avoid exposing to sunlight or rain for a long time.
- Please do not keep the product in high temperature places or near the flammable liquids, gases or explosives. Keeping the product in high temperature for long time, will influence the life of the product.
- When not in use, please keep the power bank in dry place.
- Please do not disassemble the product or use the damaged product.



Designed By Riversong in California. Made in China

PB57说明书
料号: 07-PB57-00301-12
材质:128g 双粉 尺寸: 70*50mm 风琴折