

**RIVERSONG**  
USER MANUAL

**Safari FM (CC19)**  
FM Car Charger

Before using this product, please read the instructions carefully.

**PRODUCT FEATURES**

This product is a multi-function car wireless mp3 player, it uses 2.4G wireless transmission and FM transmitter technology. It can be used to do hands-free calling and play music once you connect your phone with it. In addition, it can be used to charge two devices simultaneously through the 3.4A dual USB charging ports. The charging circuit design have overcurrent, overvoltage, short circuit and other protective measures. The FM transmitter can be connected to use for two mobile phones, receiving a call to achieve hands-free answer calls, refuse calls, replay calls and other functions. It supports USB disk and TF card to play music. Detection of battery voltage, it can reflect that whether your car battery voltage is within the normal range. It can also remind the abnormal situation of battery voltage, to avoid the battery voltage is too low which lead to the failure of starting the car. The product design is simple and fashion, exquisite workmanship. The LED display can display the FM frequency, song tracks and battery voltage. The operation is simple and the function is practical, it's a driver's necessary product.


Notice:

- Do not allow children to plug it in the cigarette lighter socket or play with the wire
- This product input voltage is DC12-24V, beyond

the specified voltage range will lead to abnormal function efficiency and might be damaged

- If you do not use for a long time, please remove the car charger from the cigarette lighter socket on the car
- Please avoid the local FM signal strong radio frequency, otherwise it will affect the quality of music
- Do not disassemble the product by yourself

**PRODUCT OVERVIEW**

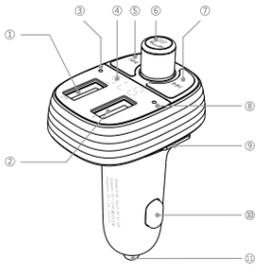

1. USB1 Charging port/U disk music
2. USB2 Smart recognition charging port
3. Mic
4. LED display screen
5. Next song
6. Multi-function button
7. Previous song
8. Working status lights
9. TF card port
10. Negative
11. Positive

**MAIN FUNCTION**

1. Wireless music
2. Hands-free calling
3. 3.4A dual USB charging
4. FM transmitter
5. Battery voltage detection
6. U disk/TF card music
7. Pair two mobile phones at the same time
8. LED display screen
9. Support no damage to play music
10. System voice broadcast

**BASIC OPERATIONS**

- Insert the FM Car Charger into the cigarette lighter socket of the car, the screen would lit after the power is switched on, and display the battery voltage for 3 seconds. If the battery voltage is normal, the FM frequency will be displayed; if not, the screen will always display the battery voltage and flicker.
- Adjust FM frequency: Open the car radio, select an empty channel frequency on the car radio first, and then set the frequency of the car radio same as FM Car Charger, you only need long press **【↻】** for 2 seconds to get it. When the screen is flashing digitally, you just need to twist the knob left or right to set the FM Car Charger FM launch frequency: twist to the left to decrease the frequency, twist to the right, the frequency will increase. After the adjustment completed, it will automatically enter the frequency point you set. After the wireless connection was successful, you can hear the music that is playing from

the car audio. (Note: Set the frequency as far as possible to avoid the local FM signal strong radio frequency, the frequency of the car is less disturbed by the local radio station, the quality of sound will be better.)

- Mode switching: In the working state, long press **【↻】** button about 5S can switch the wireless, U disk and TF card mode.

**WIRELESS CONNECTION**

- For the first time use, the FM transmitter needs to pair with mobile phone, the steps are as follows: Turn the wireless function in your mobile phone and search the device name of FM transmitter **【called CC19】**, click it and connect it, after connected successfully, the system voice will remind "connected" and it will connect automatically with the mobile phone the next time.
- The method of connecting for two mobile phones: Connect the first mobile phone to **【CC19】**, then connect the second mobile phone. It will connect automatically when it is used again. (Note: If the second mobile phone can not search **【CC19】**, you can disconnect the first mobile phone that has been connected, then using the second mobile phone to search again and connect.)

**WIRELESS HANDS-FREE CALLING**

- Answer the call: Short press the hands-free button **【☎】** once.
- Hang up the phone: During the calling, short press the hands-free button **【☎】** once.
- Reject the call: When receiving a call, long press the hands-free button **【☎】** once for 2 seconds.
- The last phone number replay: Continuous short press hands-free button **【☎】** twice.

**PLAYING MUSIC**

- The priority order of playing music is the wireless-U disk- TF card.
- After the connection is successful, short press **【☎】** can turn on the default player to play music on the phone, when playing music, press button **【⏮】** can select to the previous song, press **【⏭】** button can select to the next song, turn left twist knob to decrease the volume, turn right twist knob to increase the volume.
- When playing songs, short press **【☎】** button to play the music or pause the music.
- In the wireless state, after inserting the U disk / TF card, the U disk / TF card is played automatically, the last inserted U disk / TF card isread first.
- Power off memory: After power off restart, it can remember the FM frequency, songs and play mode before power off.

**Status light tip:**

- Blue / green light alternate flash quickly: The wireless is not connected.
- Blue / green light alternate flash slowly: The wireless is connected.
- Blue light is flashing slowly: Playing wireless music.
- Green light is flashing slowly: Playing U disk / TF card music.
- Blue light is always bright: Playing wireless music is paused.
- Green light is always bright: U disk / TF card music is paused / Phone is calling.

**key operation:**

Answer the call	Short press the hands-free button <b>【☎】</b> once.
Hang up the call	During the dialing and calling, short press the hands-free button <b>【☎】</b> once.
Reject the call	When receiving a call, long press 2 seconds hands-free button <b>【☎】</b> once.
Last phone number replay	Dial the last call number, continuous short press hands-free button <b>【☎】</b> twice.
Play music	The priority order of playing music is the wireless mode-USB disk-TF card mode.
Choose the previous music / the next music	When playing music, press <b>【⏮】</b> to select the previous song, press <b>【⏭】</b> to select the next song.
Increase and decrease volume	Toward left to twist knob to decrease the volume, turn right twist knob to increase the volume.

Adjust the frequency of FM	Long press <b>【↻】</b> button about 2 seconds, when frequency flickers into FM state, at this point, twist the knob to the left and right to adjust the frequency.
Voice switching In Chinese and English	Within 5 seconds after turn on the power, long press <b>【☎】</b> for 5 seconds, you can switch Chinese and English voice.
Mode switching	In the working state, long press <b>【☎】</b> for 5 seconds, you can switch the U disk mode, wireless mode and TF card mode.

**CAR CHARGER FUNCTION**

- The USB 1 is the 1A charging port, and it can play music by U disk.
- The USB 2 is 2.4A large current output port, it can charge multimedia devices such as mobile phones and tablet computers.
- USB2 output port built-in current identification, it can identify the size of the equipment required current and distribution, the internal circuit design has short circuit, over load, over current, over voltage and protect the circuit.

**BATTERY VOLTAGE DETECTION INSTRUCTION**

For 12V battery car, when the battery voltage is lower than 11.6V and higher than 14.8V, the LED digital tube will display the current abnormal voltage and flashing, for 24V battery car, when the battery voltage is lower than 23.2V and higher

than 27.2V, the LED digital tube will display the current abnormal voltage and flashing. The voltage warning function allows the user to grasp the battery voltage health at any time. (Note: When the voltage is abnormal and the screen is flashing, it is recommended to replace the car battery or repair, then the function of S-10 can still be used normally!)

Car series	Abnormal range	Normal range before start	Normal range after start
12V	<11.6V >14.8V	11.6V~12.8V	11.6V~14.8V
24V	<23.2V >27.2V	23.2V~25.6V	23.2V~27.2V

**PARAMETERS**

Name	Safari FM car charger
Model	CC19
Input voltage	DC12-24V
Output current	Dual USB 3.4A (Current identification)
FM frequency	87.5-108.0MHz
FM emission distance	<5 m
Wireless version	5.0
Effective distance	About 10 meters
Support USB disk	<32G
Audio format	Mp3 / WAV / FLAC / APE / WMA
Applicable models	General (12V / 24V)
For mobile phones	iOS / Android

**STANDARD ACCESSORIES**

User manual, 12-month warranty card

**Q&A Questions and Answers:**

Q: Can I change the FM emission frequency point?

A: Yes, turn on the mobile phone and remember the last use of the frequency, if you need to adjust the frequency and frequency point, just press the hands-free button for 2 seconds, and then toward the left and toward the right twist the knob can be adjusted.

Q: The mobile phone can find **【CC19】** device, but why can't it be connected?

A: Please confirm whether there are other mobile phones have been connected with the product, disconnect the previous device and try again.

Q: Is it safe to charge the mobile phone?

A: Yes, it is safe. If according to the standard operation, it is no problem. We have designed a variety of conventional protective circuits in the product.

Q: Does it support navigation broadcast?

A: It can support the phone's voice navigation broadcast.

Q: Why the mobile phone did not find **【CC19】** wireless device name?

A: Please make sure the player's screen is bright and electric, and also confirm whether the switch of

wireless function is on for your device.

Q: Why there is noise when playing music on the car?

A: We recommended that you use the local empty channel or weak channel of radio signal.

Q: Why the car radio can't play music?

A: Make sure that the device has a successfully connected with the phone, and also confirm whether the frequency on the player is consistent with the frequency on the car.

Q: Why is the value of the voltage on the display flashing all the time?

A: It is proved that the voltage of the vehicle battery has exceeded the standard voltage range, and it is recommended to overhaul the battery at the automobile repair station.

Q: Why the second mobile phone connection is unsuccessful?

A: Please check whether the first mobile phone has been connected successfully, if the connection is successful, please disconnect the wireless function, then you can search and connect the second mobile phone and turn on the wireless function of the first mobile phone again.

Q: Can it switch the U disk mode, wireless mode and TF card mode?

A: Yes. In the working state, long press hands-free **【☎】** button about 5S, the U disk mode, wireless mode and TF card mode can be cyclic switching.

**Certificate of approval**

Inspector: \_\_\_\_\_

Date of production: \_\_\_\_\_



CC19说明书料号: 07-CC19-00301-11